Display

CE-VT288 / CE-VT588
CE-VT568 / CE-VT768
CE-VT988 / CE-VT968
User Manual

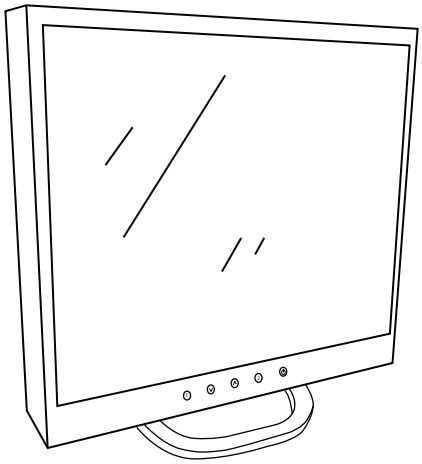

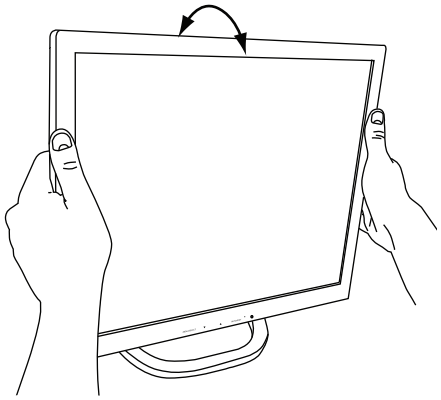

To tilt the display grab the sides and rotate backwards of forwards.

Included Items

- Monitor
- Stand
- Instruction Sheet
- Power Supply
- VGA Cable

Using the Buttons

MENU/SELECT / 1 — Pressing the "MENU/SELECT" or "1" button on the unit will enter the menu. Pressing it again will enter the current selection. Also used to toggle between available settings for certain menu selections.

AUTO/EXIT / 2 — Press the "AUTO/EXIT" or "2" button to back out to the previous screen or to exit the menu.

Navigate to items in each menu item by pressing the down or up buttons. These buttons will also adjust settings. Ex: raise or lower contrast.

AUDIO
Pressing the Down button (when not in the menu) will mute/unmute the audio. This may have no effect on your display as audio functions may be unsupported on your device.

Pressing the Up button (when not in the menu) will open the volume menu and raise the volume.

SOURCE
Pressing the "AUTO/EXIT" or "2" button (when not in the menu) will change the input source.

RGB: VGA input
AV1: BNC input 1
AV2: BNC input 2 (select models only)

POWER

The power button will toggle the display on or off:

- Power button/light not illuminated: Unit is off
- Power button/light illuminated green: Unit is on
- Power button/light illuminated orange: Unit is in standby mode. Will remain in standby until source is changed to an active input. If you press the power button while in standby mode the unit will turn off. When powered back on, the display will return on the last input used. If no source is connected, you will see a "No Signal" message followed by "Source#] Enter Sleeping Mode".

Back Panel - Inputs vary by model

CE VT-288 / 588 / 988

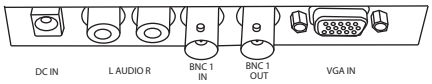

BNC Out: Connect an external display to display BNC Input. BNC input must selected in order to display on external monitor.

CE VT-568 / 768 / 968

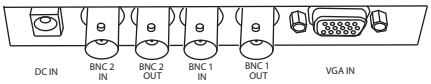

BNC 1 Out: Connect an external display to display BNC 1 Input.
BNC 2 Out: Connect an external display to display BNC 2 Input.

OSD Menus

The display should be pre-set for most installations, however if some adjustment is necessary, you may adjust by pressing the "MENU/SELECT" or "1" button on the display

Video Menu:

BRIGHTNESS: Set the black level so that the images are at their brightest while the black images are still black. Do not adjust too high where the black portions of the image become gray or the image will have a "washed out" appearance.

CONTRAST: Set the white level so that the images are at their brightest without losing definition in the white portions of the image.

COLOR: Adjust to achieve a realistic image of the items within the viewing area.

TINT: Adjust if the image has bluish or reddish tint to the white portions of the image.

SHARPNESS: Lower the sharpness if the image appears too grainy or pixelated. Increase the sharpness if the image appears too soft. Note: Adjust only after adjusting the camera lens for optimum focus.

VIDEO MODE: Change to preset display modes: Vivid, Normal, Nature, Cinema, or Sport.

RESET: This can be used to return the Video settings back to the default settings. Pressing the "MENU/SELECT" or "1" button will return all video settings back to the factory defaults.

Audio Menu:

VOLUME: Raise or lower the volume on device that is connected to RCA audio inputs. Available on supported models only.

Feature Controls Menu:

SLEEP TIMER: Adjustable from 0 to 90min (in 10 minute increments). After which time the display will power off. The sleep timer is a one time only setting. After the display is powered off, the sleep timer will reset to "OFF".

LANGUAGE: Select from one of the following: English, French, German, Spanish, Italian, Dutch, Greek, Swedish.

OSD CONTROL: Here you can set the horizontal and vertical position of the OSD menu, rotate or mirror the menu, and control the duration the menu is on screen; 2-16 seconds (adjustable in 2 second increments).

PARENTAL CONTROLS: Function not supported on units that do not include a remote control.

CLOSE CAPTION: Activate close caption and change settings for mode and channel. Source must have close caption capabilities to function.

*FACTORY RECALL: Pressing the "MENU/SELECT" or "1" button will return all settings back to factory defaults. Doing so will void all of your custom settings. Ensure this is your intention before proceeding.

CLINTON Electronics

CLINTON Electronics
6701 Clinton Road
Loves Park, IL 61111

1.800.447.3306 **Sales**
1.800.549.6393 **Support**
1.800.633.8712 **Fax**

www.clintonelectronics.com

v.04.06.11